

For installation, the correct placement of this new Universal Cord Tensioner is critical, since there needs to be enough tension placed on the cord loop to release the lock in the tensioner.


Basic Installation Steps

Inside mount

1. Locate the tensioner as close to the shade as possible without it interfering with the fabric or bottom rail.
2. Hold the tensioner flat against the window frame.
3. Insert an awl, nail punch or small screwdriver into the screw mounting hole and pull it down at least $\frac{1}{2}$ " to release the lock in the tensioner.
4. Mark this position for the screw to be installed into the window frame.

Outside mount

1. Attach the outside mount bracket to the cord tensioner.
2. Pull down on the bracket so the screw attaching the tensioner to the bracket is at least $\frac{1}{2}$ " from the top of the slot in order to release the lock in the tensioner.
3. Mark the locations of the bracket screw holes on the wall surface.
4. Make sure this position does not interfere with the operation of the shade.

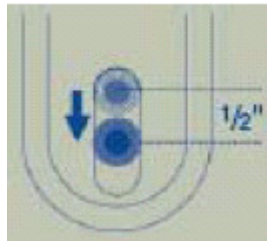

Pull the mounting hole on the cord tensioner down $\frac{1}{2}$ " before attaching.